



LT610040

## Relay locations (central electrical unit)

- First remove the fuel tank in order to remove a relay.

1. Lamp control unit
2. Start relay
3. Turn indicator relay
4. **[ABS I]** ABS relay



### Note:

With **ABS II** the relay is on the ABS unit. See Group 34 "Removing and installing ABS relay base".

5. Motronic relay
6. ABS warning relay
7. Fan relay
8. Horn relay
9. Fuel pump relay
10. Load relief relay